

# Johnsonite®

## Floor Keeper™ Rubber Entrance Barrier Matting

### Maintenance Instructions

#### **Routine Maintenance**

---

**"Surface-Mounted" Installations:** Do not perform any maintenance or expose the product to water or moisture for 48 hours after installation.

1. Johnsonite Floor Keeper Entrance Barrier Matting requires minimal maintenance. However, regular routine maintenance will not only enhance the product's performance and appearance, but it will also improve its life expectancy.

**Daily:** Vacuum with a brush-type vacuum.

**Weekly:** Shampoo to remove soiling and restore original color. Use a standard carpet shampoo or a mixture of 1 cup of a liquid, neutral pH, detergent mixed to 1 gallon of water. Scrub matting with a carpet shampoo machine or deck brush. Rinse with cold water and wet vacuum excess water from matting surface.

**Periodic:** Clean up gum or tar deposits with lacquer thinner or M.E.K. Use caution as most of these cleaners are flammable.

If questions arise that have not been addressed in this brochure, contact your local Johnsonite distributor for assistance or Johnsonite Customer Service at 1-800-899-8916.

# Johnsonite®

Technical Services Department  
16910 Munn Road, Chagrin Falls, Ohio 44023  
(800) 899-8916 ext 297 Fax (440) 543-8920

www.Johnsonite.com  
E-mail: info @ Johnsonite.com

© 2006 Johnsonite, Inc. A Tarkett Company.